

ROLLER & SUNSCREEN BLINDS INSTALLATION

INSTALLING YOUR BLINDS IS EASY WITH OUR SIMPLE INSTALLATION GUIDES!

ITEMS DELIVERED AS PART OF YOUR PACKAGE:

- **Roller blind**
- **Brackets and screws**
- **Clear plastic stoppers (clips to ensure blinds do not over run when pulling chain)**
- **Child safe clip and screws**

TOOLS REQUIRED:

- **Cordless drill with square head drill bit**
- **If blind is particularly large have someone help you lift and secure in place.**

GO TO PAGE 2 FOR INSIDE THE FRAME INSTALLATION.

GO TO PAGE 4 FOR OUTSIDE THE FRAME INSTALLATION.

ROLLER AND SUNSCREEN INSTALLATION INSIDE FIT

STEP 1 INSIDE WINDOW FIT



- Unwrap blind and peel tape off middle wrap. (Do not use sharp object as this may damage your blind).
- Place brackets and take notice of the brackets shape and how they correspond to the ends of the blind.
- Position brackets inside recess 5mm back from the frames and use a battery drill to fix a bracket at each end with screws provided.

STEP 2 INSIDE WINDOW FIT



- Place blind into brackets. Take notice of the brackets shape and how they correspond to the ends of the blind.
- The blind has a hook that fits into the + shape on the bracket. The hook needs to point down into the lowest point of the + shape.
- The blind must be semi level to hook into place.
- Once hooked into place at the opposite end is a spring-loaded pin that you push in and clip into place.




- See picture of control end on blind (white) and control end bracket (black)

STEP 3 INSIDE WINDOW FIT CLEAR PLASTIC STOPPERS



 - Clear plastic stoppers will need to be placed on the chain to prevent the fabric rolling off the blind.
- Each blind is provided with two stoppers. Stoppers are difficult to remove so ensure correct placement.
- First stopper: roll the blind down until it reaches the bottom of the window frame, (where you would like it to sit when in the down position). DO NOT KEEP ROLLING PAST THE WINDOW FRAME. Place one stopper at the top of the chain at the back of the blind.
- Second stopper: Roll the blind up and place a stopper at the top of the front chain.

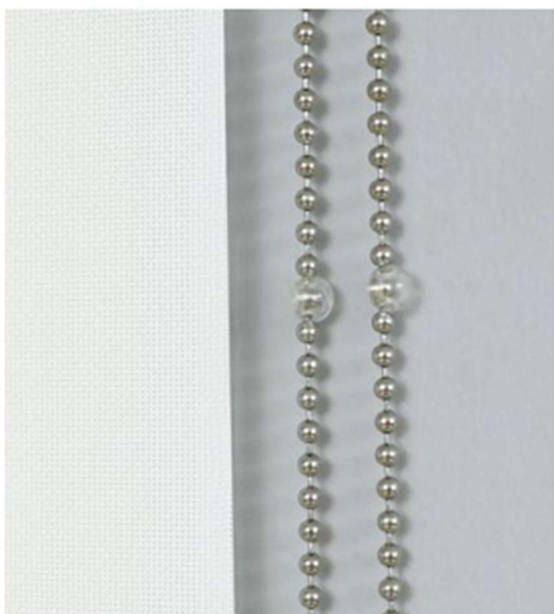

OPTIONAL: CHILD SAFE

Child safety are small plastic clips that holds the chain in place. They are designed to reduce the risk of strangulation. Child Safe's also provide a neat and tidy look and stop the chain from moving around in a draft if window or door is open where blind is fitted.

 
To fasten the Child Safe hook the chain around the clip of the Child Safe and position it either inside the recess or to the face (determined by whether the blind is fitted to the recess or face).

Make sure the position of the Child Safe will not interfere with the blind once fully wound down. Allow for some slack in the chain so you may still operate the blind easily. Once you are satisfied with the position drill into place.



ROLLER AND SUNSCREEN INSTALLATION OUTSIDE FIT

STEP 1 OUTSIDE WINDOW FIT

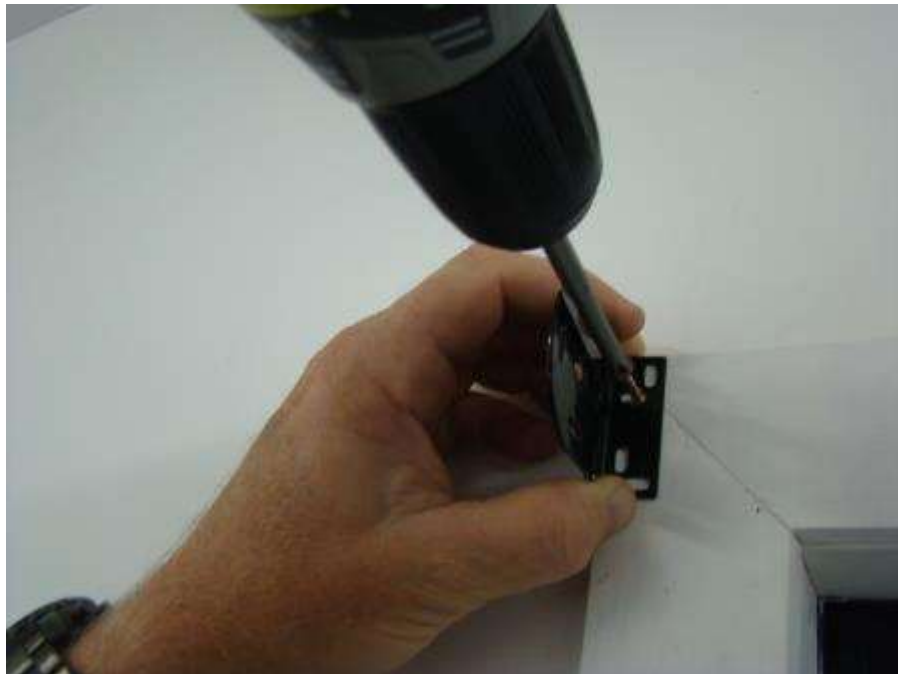

- Unwrap blind and peel tape off middle wrap. (Do not use sharp object as this may damage your blind).
- Face Fit: Position brackets at each end flush with the face of the frame and drill into place using a battery drill and screws provided.

STEP 2 OUTSIDE WINDOW FIT



- Place blind into brackets. Take notice of the brackets shape and how they correspond to the ends of the blind.
- The blind has a hook that fits into the + shape on the bracket. The hook needs to point down into the lowest point of the + shape.
- The blind must be semi level to hook into place.
- Once hooked into place at the opposite end is a spring-loaded pin that you push in and clip into place.

 


- Control end on blind (white) and control end bracket (black)
- TIP: if blind is particularly large have someone help you lift and secure in place.

STEP 3 OUTSIDE WINDOW FIT



- Clear plastic stoppers will need to be placed on the chain to prevent the fabric rolling off the blind.
- Each blind is provided with two stoppers. Stoppers are difficult to remove so ensure correct placement.
- First stopper: roll the blind down until it reaches the bottom of the window frame, (where you would like it to sit when in the down position). **DO NOT KEEP ROLLING PAST THE WINDOW FRAME.** Place one stopper at the top of the chain at the back of the blind.
- Second stopper: Roll the blind up and place a stopper at the top of the front chain..

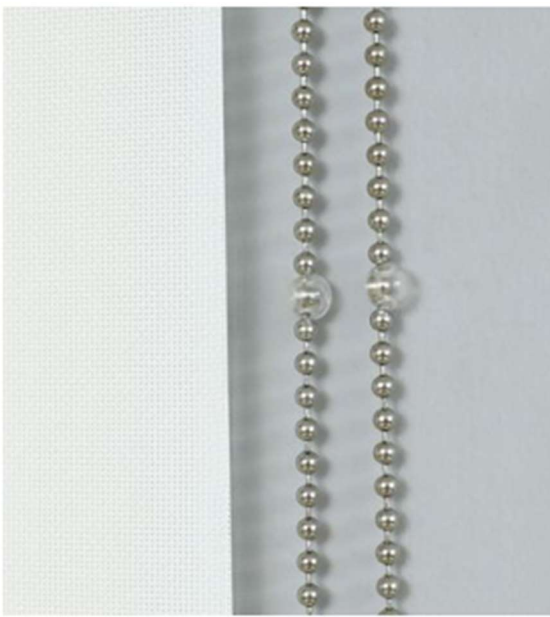

OPTIONAL: CHILD SAFE

Child safety are small plastic clips that holds the chain in place. They are designed to reduce the risk of strangulation. Child Safe's also provide a neat and tidy look and stop the chain from moving around in a draft if window or door is open where blind is fitted.

To fasten the Child Safe hook the chain around the clip of the Child Safe and position it either inside the recess or to the face (determined by whether the blind is fitted to the recess or face).

Make sure the position of the Child Safe will not interfere with the blind once fully wound down. Allow for some slack in the chain so you may still operate the blind easily. Once you are satisfied with the position drill into place.

